




Champion Power Equipment, Inc.

MODEL #201286

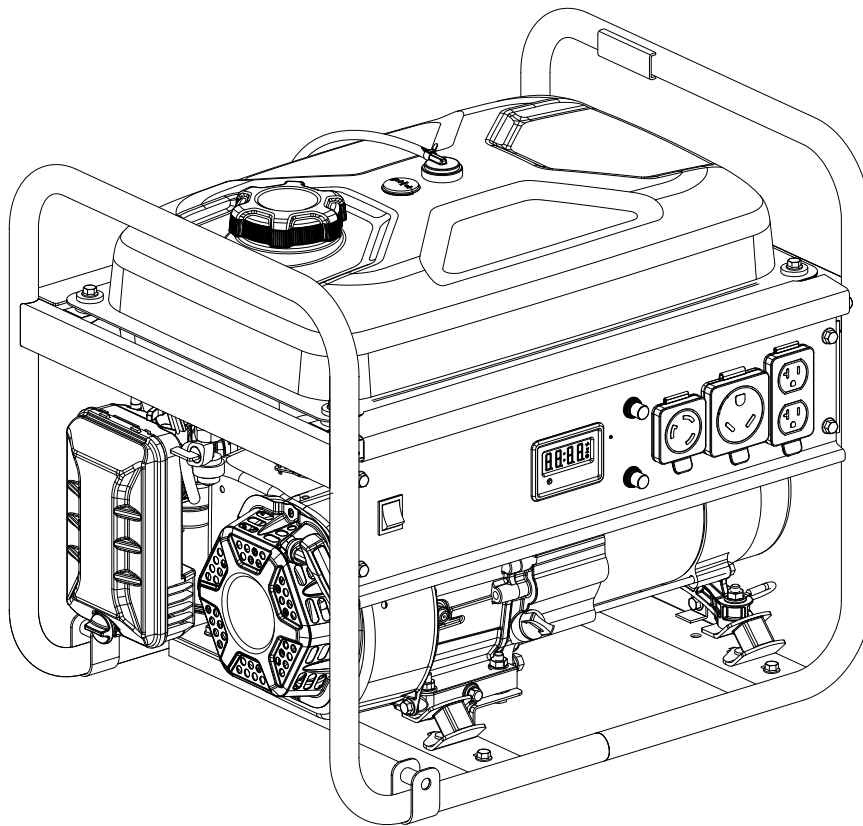

PARTS INFORMATION

3500W PORTABLE GENERATOR

SERIAL NUMBER RANGE: ALL

An icon depicting a person wearing a headset and holding a wrench, with an arrow pointing to a box, symbolizing customer support or parts ordering.

To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram	3
Generator Parts List	4
Engine Parts Diagram	5
Engine Parts List	6
Cylinder Head Parts Diagram	8
Cylinder Head Parts List	9
Carburetor Parts Diagram	10
Carburetor Parts List	11
Alternator Parts Diagram	12
Alternator Parts List	13
Fuel Tank Parts Diagram	14
Fuel Tank Parts List	15
Control Panel Parts Diagram	16
Control Panel Parts List	17
Frame Assembly Parts Diagram	18
Frame Assembly Parts List	19
Wiring Diagram	20

GENERATOR PARTS DIAGRAM

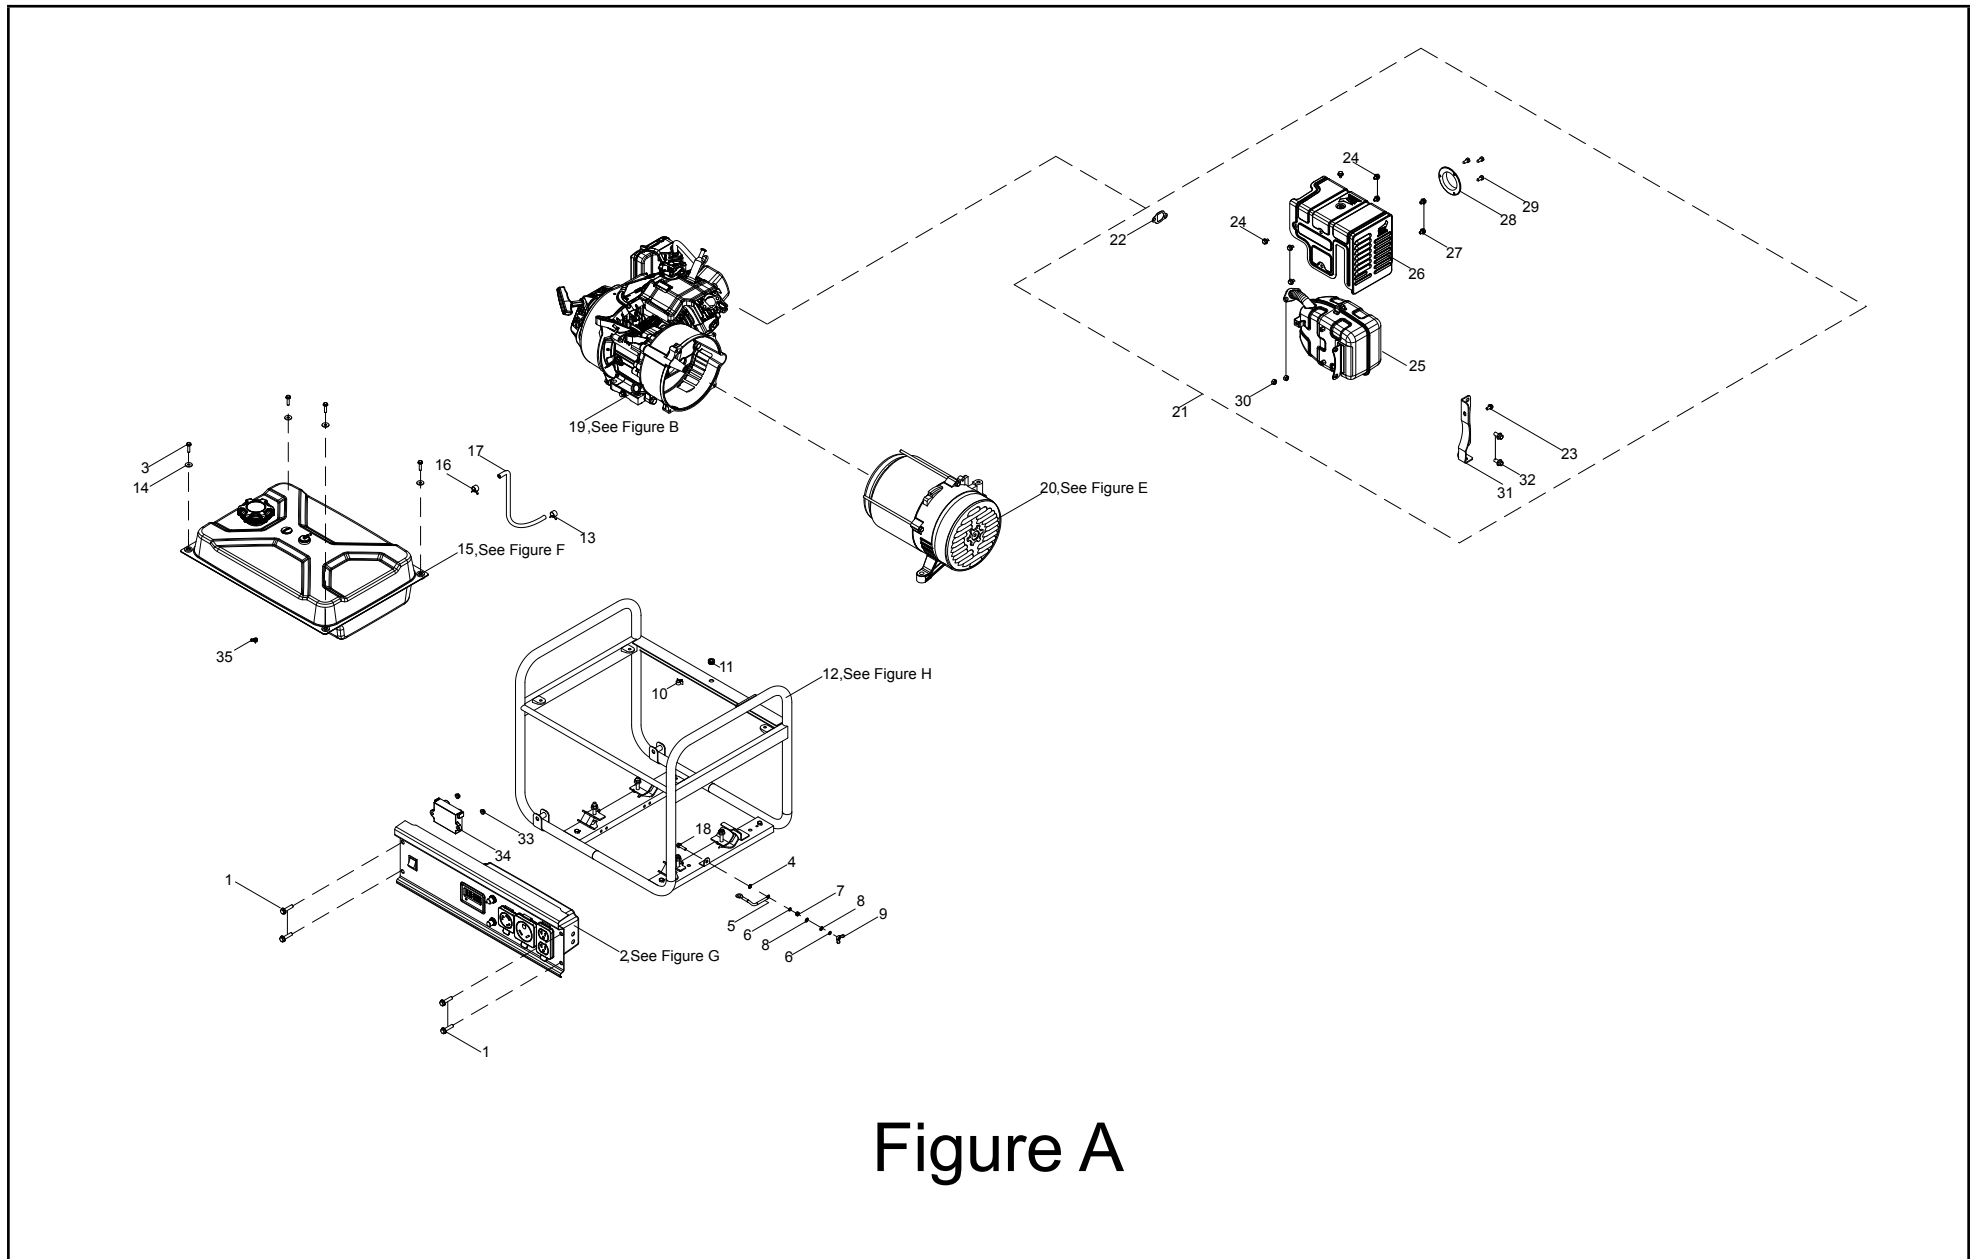


Figure A

GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	100011261-0002	M6 x 12 Flange Bolt, GB5789	4
2	100790242-0001	Control Panel Assembly, See Figure G	1
3	100011268-0002	M6 x 25 Flange Bolt	4
4	100128826-0001	Toothed Lock Washer Ø6	1
5	100009983	Grounding Wire	1
6	100010886-0004	Spring Washer Ø6	2
7	100011421-0003	M6 Flange Nut, GB6170	1
8	100010920-0002	Flat Washer Ø6	2
9	100010828-0002	Butterfly Type Nut M6	1
10	100000667	Clamp Ø8 x 8	1
11	100009075	Rubber Damper	1
12	100790396	Frame Assembly, See Figure H	1
13	100005159	Clamp Ø10.5 x 8	1
14	100010439-0001	Washer Ø6.5 x 2 x Ø25	4
15	100750073	Fuel Tank Assembly, See Figure F	1
16	100005148	Clamp, Ø8	1
17	100720118	Connection Tube	1
18	100011269-0003	M6 x 28 Flange Bolt	1
19	1ZC7DC015	Engine	1
20	100757172	Alternator Assembly, See Figure E	1
21	100757169	Muffler Assembly	1
22	100757369	Gasket, Muffler	1
23	100011261-0004	M6 x 12 Flange Bolt	1
24	100097575-0002	M6 x 10 Flange Bolt	3
25	100724996	Muffler	1
26	100724737	Muffler Guard	1
27	100721012-0002	M6 x 8 Flange Bolt, QC340	5
28	100724738	Spark Arrester Assembly	1
29	100147110-0002	M4 x 8 Flange Bolt	3
30	100011422-0004	M8 Flange Nut	2

#	Part Number	Description	Qty.
31	100751213-0001	Muffler Bracket	1
32	100011230-0002	M8 x 16 Flange Bolt, GB5787	2
33	100011446-0001	M4 Flange Nut	2
34	5.1830.022	CO Shutdown Module	1
35	100005149	Clamp Ø7.5	1

ENGINE PARTS DIAGRAM

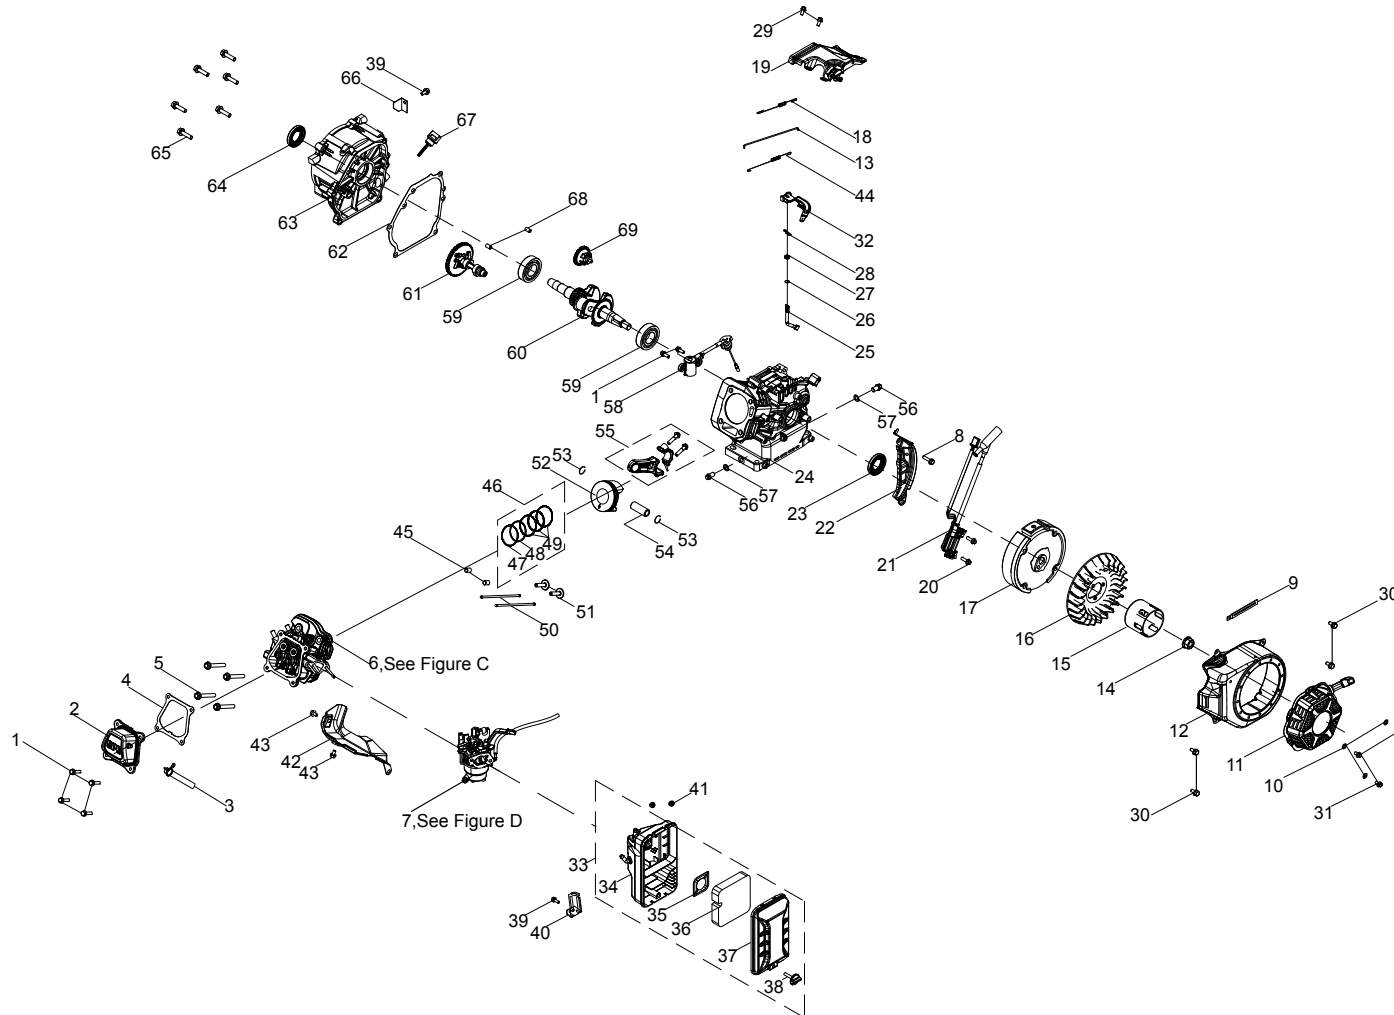


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011264-0003	M6 x 16 Flange Bolt, GB5789	6
2	100002335	Cylinder Head Cover(Cpe)	1
3	100719261	Breather Tube	1
4	100079562	Cylinder Head Cover Gasket	1
5	100002464-0001	M8 x 60 Flange Bolt	4
6	100756908	Cylinder Head Assembly - See Figure C	1
7	100790420	Carburetor Assembly - See Figure D	1
8	100011266-0004	M6 x 20 Flange Bolt	1
9	100000655	Wire Clip B	1
10	100010894-0001	Washer Ø6	3
11	100156547-0001	Recoil Starter, Black	1
12	100086735-0014	Fan Cover, Yellow	1
13	100007947	Governor Rod	1
14	100011459-0003	M14 x 1.5 Flange Nut	1
15	100007550	Starter Pulley	1
16	100007028	Engine Cooling Fan	1
17	100009503	Flywheel	1
18	100007840	Governor Spring	1
19	100086510	Engine Fan Air Guide	1
20	100011268-0003	M6 x 25 Flange Bolt	2
21	100161478	Ignition Module	1
22	100150077	Lower Guard	1
23	100017644	Oil Seal Ø25 x Ø41.25 x 6	1
24	100056000	Crankcase	1
25	100007975	Governor Shaft	1
26	100010113	Sealing Ring, Ø5.2 x 1.9	1
27	100017630	Oil Seal Ø6 x Ø11 x 4	1
28	100007986	Governor Shaft Cotter	1
29	100011215-0001	M6 x 12 Flange Bolt	2
30	100011262-0003	M6 x 14 Flange Bolt, GB5789	4

#	Part Number	Description	Qty.
31	100011564-0001	M6 x 8 Flange Bolt	3
32	100008417	Governor Arm	1
33	100720109	Air Filter Assembly	1
34	100727318	Air Filter Base	1
35	100005078	Air Filter Baffle	1
36	100004771	Air Filter Element	1
37	100087055	Air Filter Cover	1
38	100004949	Air Filter Bolt	1
39	100011261-0004	M6 x 12 Flange Bolt	2
40	100021030	Air Cleaner Support Bracket	1
41	100011463-0002	M6 Flange Nut	2
42	100007083	Lower Air Guide	1
43	100011260-0005	M6 x 10 Flange Bolt, GB5789	2
44	100007920	Throttle Return Spring	1
45	100010558	Dowel Pin Ø10 x 16	2
46	100003245	Piston Ring Set	1
47	100003150	1st Piston Ring	1
48	100003191	2nd Piston Ring	1
49	100003283	Oil Ring	1
50	100077152	Push Rod	2
51	100004262	Valve Lifter	2
52	100086253	Piston	1
53	100003221	Circlip	2
54	100003120	Wrist Pin	1
55	100003446	Connecting Rod	1
56	100010272	Drain Bolt, M10 x 1.25 x 15	2
57	100010459	Washer Ø10 x 1.5 x Ø16	2
58	100161669	Oil Level Sensor	1
59	100010761	Bearing, TM6205	2
60	100085214	Crankshaft	1

#	Part Number	Description	Qty.
61	100099599	Camshaft	1
62	100075572	Crankcase Cover Gasket	1
63	100002961	Crankcase Cover	1
64	100017651	Oil Seal Ø25 x Ø41.25 x 6, Spiral Grain	1
65	100011319-0001	M8 x 32 Flange Bolt	6
66	100020165	Support, End Cover	1
67	100004105-0006	Oil Dipstick Assembly	1
68	100010550	Dowel Pin Ø8 x 14	2
69	100008298	Governor Gear	1

CYLINDER HEAD PARTS DIAGRAM

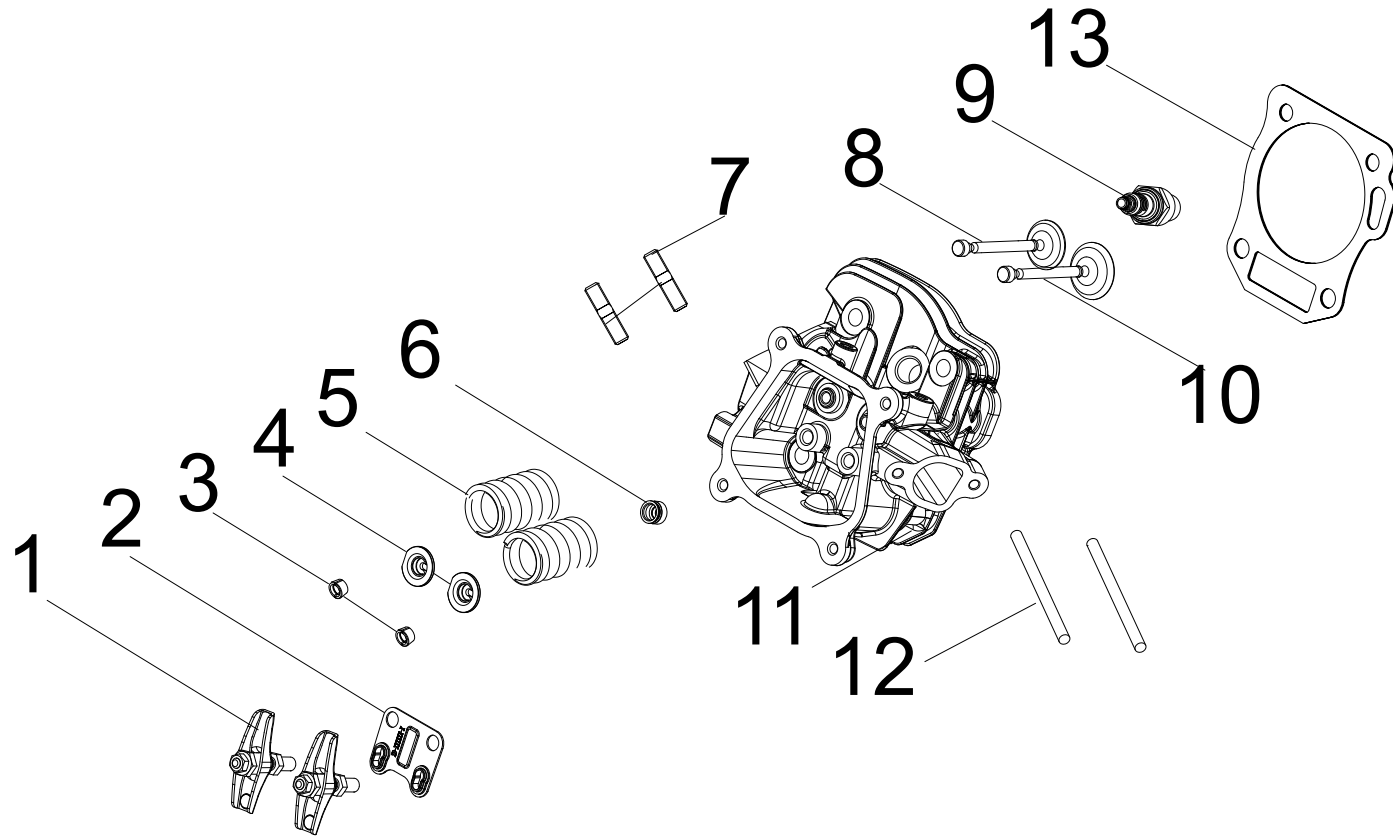


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100149239	Rocker Arm Assembly	2
2	100050881	Push Rod Guide Plate	1
3	100050896	Valve Collet	4
4	100073758	Upper Valve Spring Seat	2
5	100713979	Spring Valve	2
6	100004599	Intake Valve Oil Seal	1
7	100010389	M8 x 35 Stud Bolt	2
8	100713981	Exhaust Valve	1
9	100009378	Spark Plug F6RTC	1
10	100713980	Intake Valve	1
11	100079792	Cylinder Head	1
12	100010354	M6 x 96 Stud Bolt	2
13	100732676	Cylinder Head Gasket	1

CARBURETOR PARTS DIAGRAM

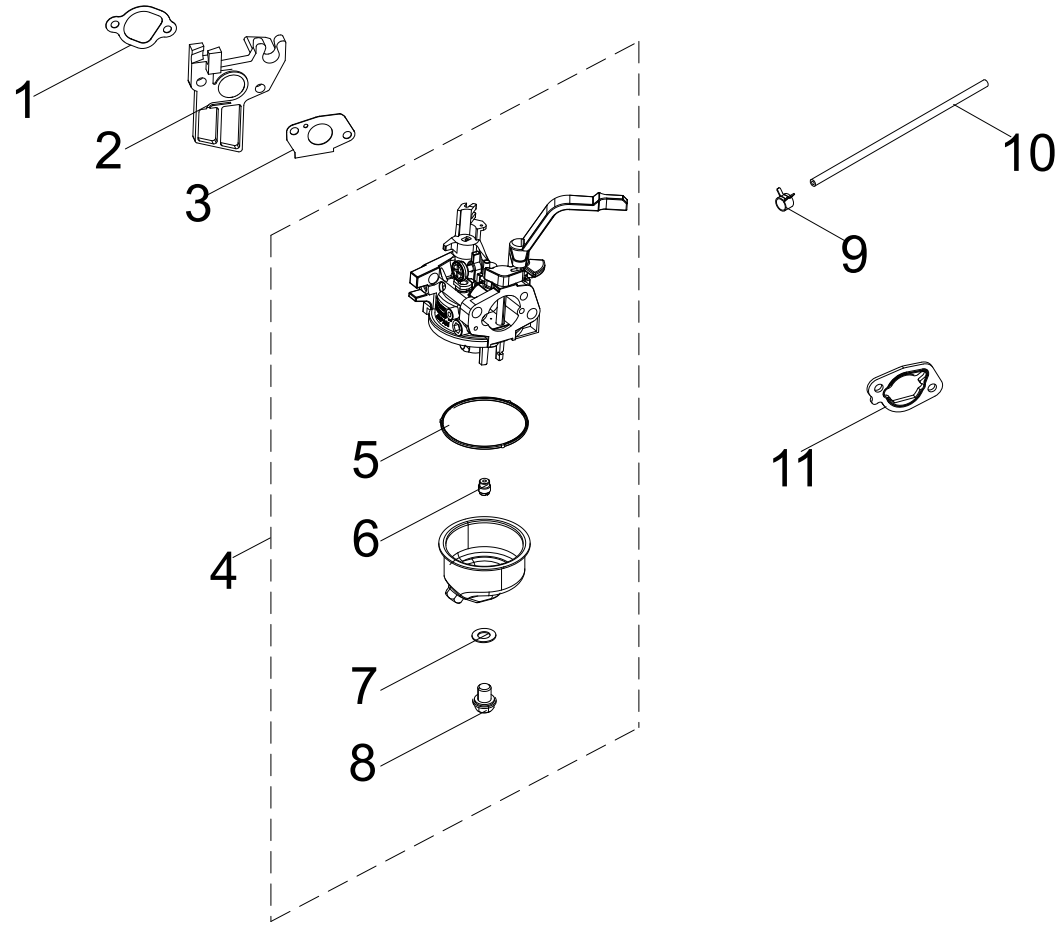


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100078607	Insulator Gasket	1
2	100005599	Carburetor Insulator	1
3	100078606	Carburetor Gasket 1	1
4	100790378	Carburetor	1
5	100005717	Fuel Bowl O-Ring	1
6	100005767	Main Jet Standard	1
	100005754	Main Jet Altitude 1000-3000m	/
7	100006037	Fuel Bowl Mounting Bolt Gasket	1
8	100005725	Fuel Bowl Mounting Bolt	1
9	100005149	Clamp	1
10	100753436	Fuel Tube, Ø4 x Ø8 x 126	1
11	100005629	Carburetor Gasket 2	1

ALTERNATOR PARTS DIAGRAM

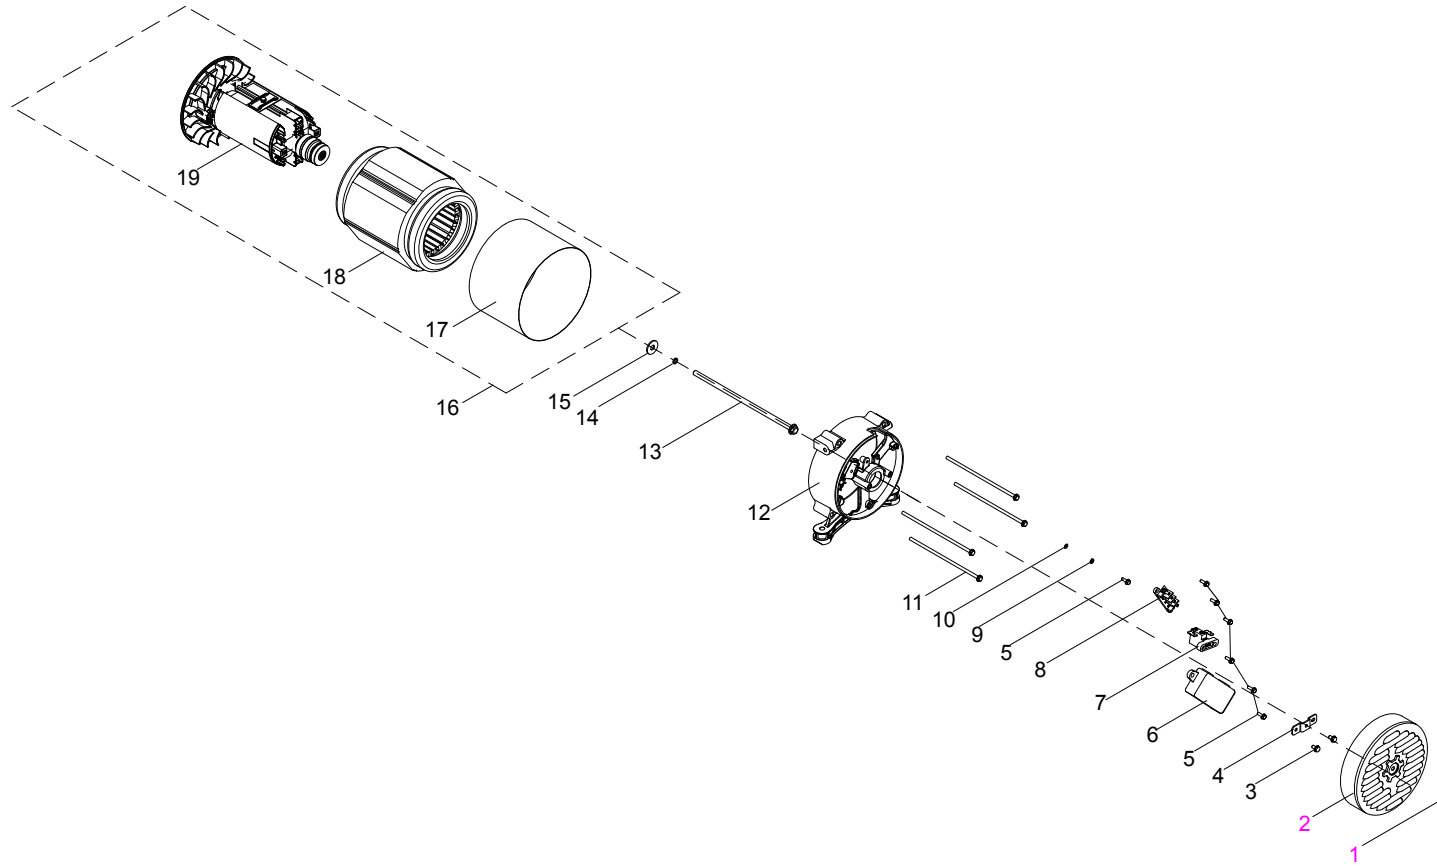


Figure E

ALTERNATOR PARTS LIST

#	Part Number	Description	Qty.
1	100011527-0004	M6 x 8 Flange Bolt	1
2	100717500-0001	Generator End Cover	1
3	100011250-0002	M5 x 14 Flange Bolt	2
4	100722067	Support Block	1
5	100011252-0001	M5 x 18 Flange Bolt	7
6	100750028	AVR	1
7	100018592	Carbon Brush Assembly	1
8	100018701	Terminal Block	1
9	100010885-0004	Spring Washer Ø5	1
10	100010919-0002	Flat Washer Ø5	1
11	100011297-0002	M6 x 165 Flange Bolt	4
12	100018567	End Housing	1
13	100011375-0001	M8 x 1 x 220 Flange Bolt	1
14	100010887-0004	Spring Washer Ø8	1
15	100010899-0002	Washer Ø8	1
16	100753104	Alternator Assembly, AI	1
17	100095943	Stator Cover	1
18	100755891	Stator Assembly, AI	1
19	100755892	Rotor Assembly, AI	1

FUEL TANK PARTS DIAGRAM

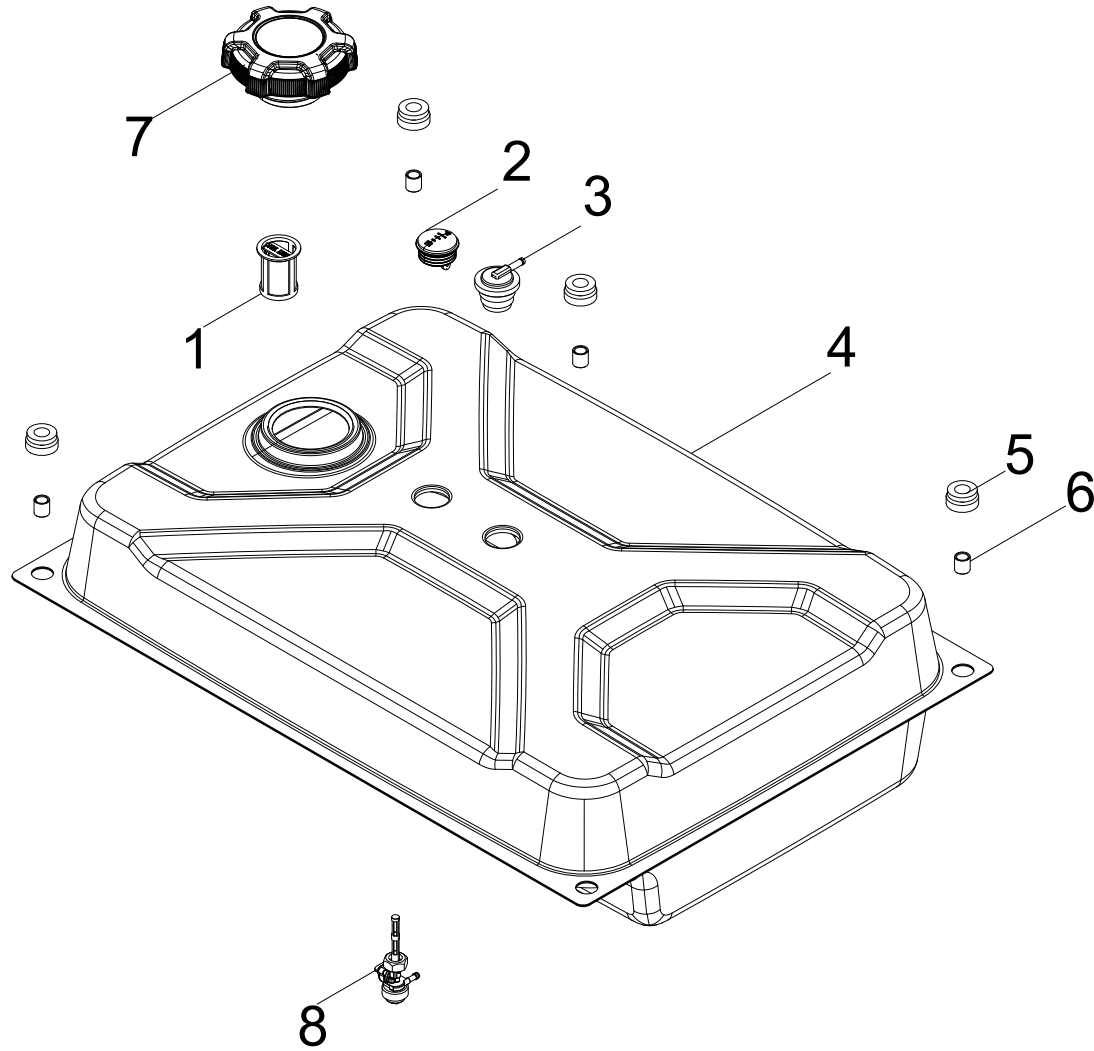


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100714493	Fuel Filter Assembly	1
2	100712045	Fuel Gauge	1
3	100099571	Reversal Valve	1
4	100713756-0001	Fuel Tank	1
5	100032369	Fuel Tank Vibration Mount	4
6	100021118	Bushing, Ø12 x Ø9 x 13	4
7	100142004	Fuel Tank Cap	1
8	100732004	Fuel Valve	1

CONTROL PANEL PARTS DIAGRAM

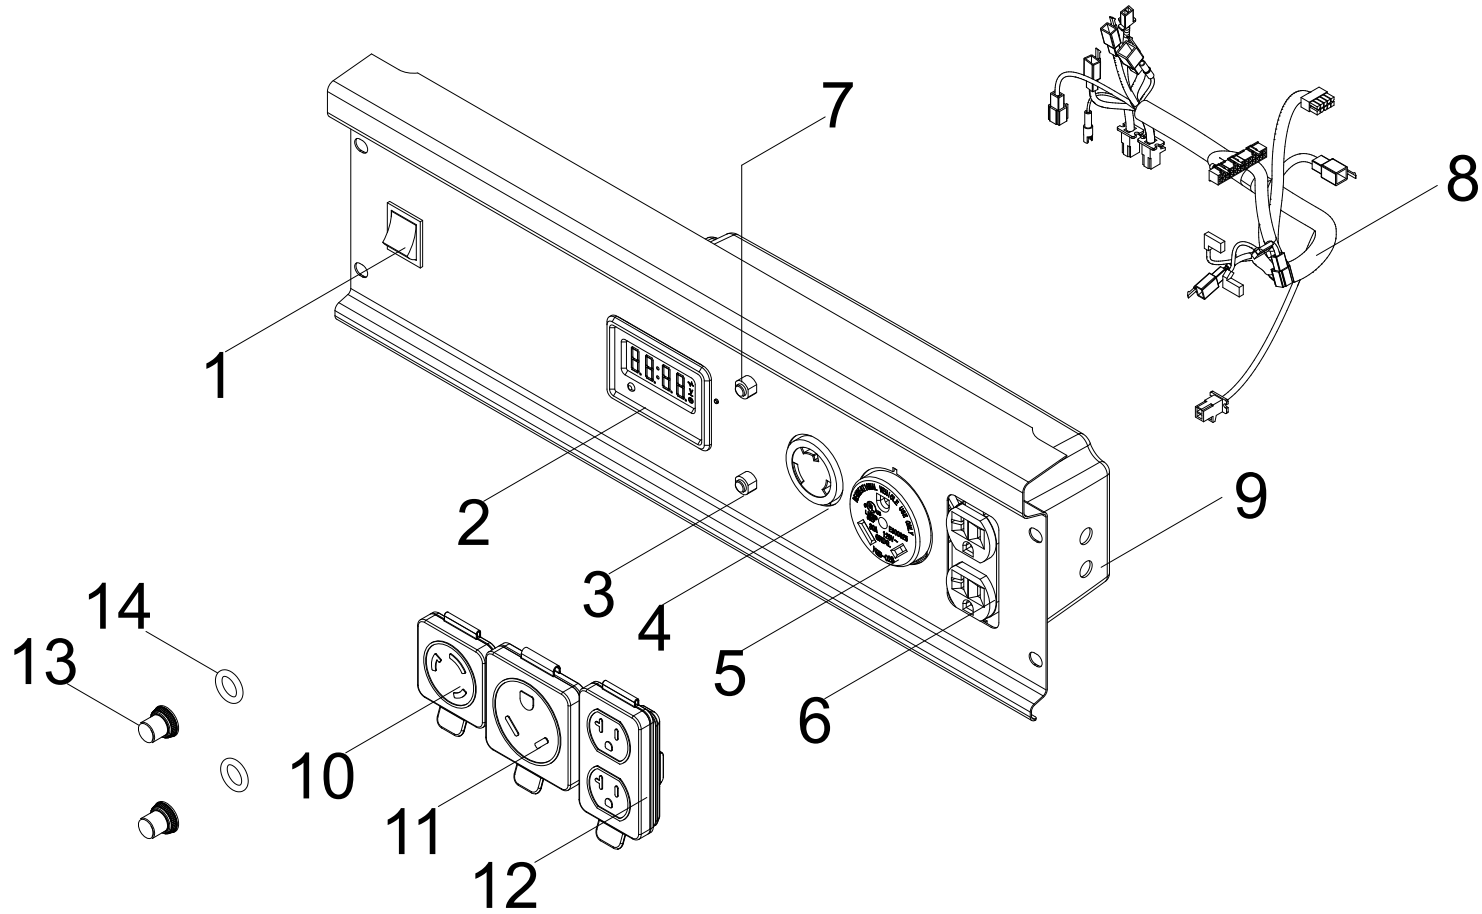


Figure G

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100019772-0001	Switch	1
2	100727009	Intelligauge	1
3	100019751	30Amp Circuit Breaker, Push Button	1
4	100020012	Receptacle L5-30R	1
5	100020008	Receptacle TT-30R	1
6	100020029	Receptacle 5-20R, Duplex	1
7	100019754	20Amp Circuit Breaker, Push Button	1
8	100790395	Wire Harness Assembly	1
9	100764632-0001	Control Panel Housing	1
10	100731573	Receptacle Cover L5-30R	1
11	100731572	Receptacle Cover TT-30R	1
12	100731575	Receptacle Cover 5-20R, Duplex	1
13	100120180	Switch Breaker Cover	2
14	100031552	O-Ring	2

FRAME ASSEMBLY PARTS DIAGRAM

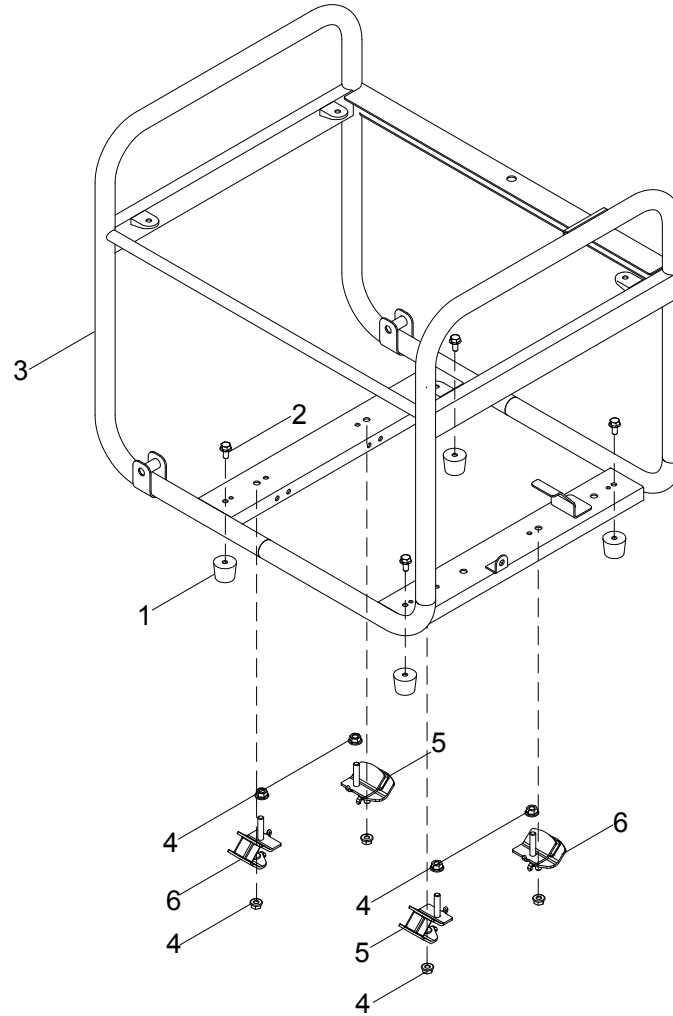


Figure H

FRAME ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100022336	Damping Support	4
2	100011261-0004	M6 x 12 Flange Bolt	4
3	100790299-0001	Frame	1
4	100011453-0003	M8 Flange Lock Nut	8
5	100020986-0001	Vibration Mount 2	2
6	100021000-0001	Vibration Mount 1	2

WIRING DIAGRAM

